

INSTALLATION GUIDE
AUTO SHUT OFF KIT



Installation Kit

1. Float Valve
2. Pressure Switch
3. 2m Blue Pipe
4. Check Valve

Fitting the auto shut off kit is relatively simple.

Diagram One:

To stop water entering the system


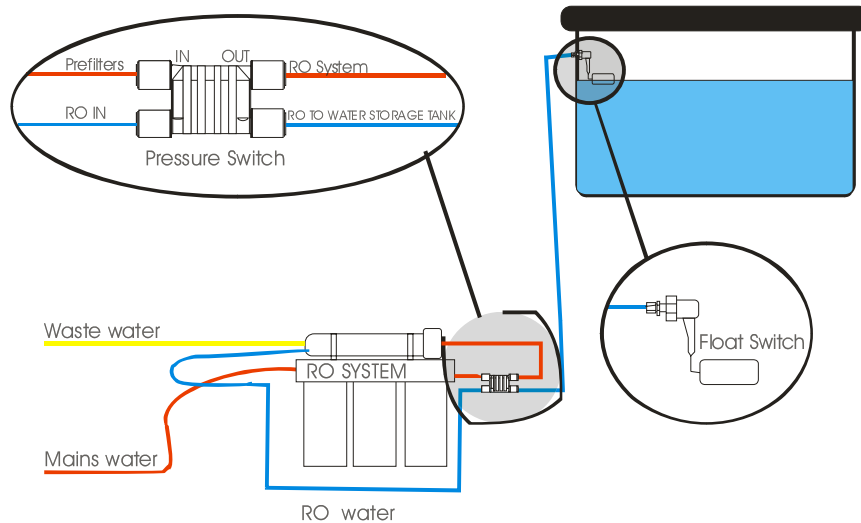


Diagram Two

To stop water exiting the system

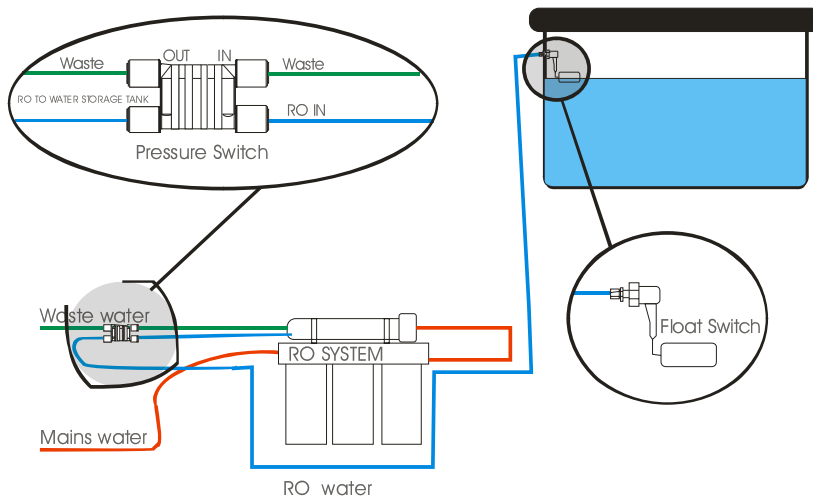

We have supplied two Diagrams as one stops the system from running and keeps it non pressurised whilst the other keeps the system totally pressurised. We recommend the first as there is less chance of the systems leaking.

For systems that are not manufactured by RO-MAN you may need to fit the check Valve to the membrane housing,

1. Locate the product water pipe on the membrane housing
2. Remove the existing fitting, re attach the one supplied (make sure you tape the threads with PTFE tap to stop any leaks).
3. Re-attach the product water pipe.

If you have any issues fitting your auto shut off kit please email support@ro-man.com

Please include a description of your issue and if you can, a photo of the installation.

RO-MAN.COM LTD