


SV-14TA Saddle Valve Installation Instructions

1. Select a straight section of the water supply line (copper).
2. Clamp around water line using two clamping screws (D). Tighten evenly.

Note: Use saddles (A) & (B) for 3/8" O.D. pipe, only saddle (B) for 1/2" O.D. pipe, or no saddles for 5/8" pipe.

3. Connect the end of the tubing to the filter system or refrigerator ice maker feed water input.
4. Turn adjustment knob (E) clockwise as far as it will go to pierce the water line.
5. Back out knob counter clockwise as far as it will go for full flow. Adjust down for desired flow.

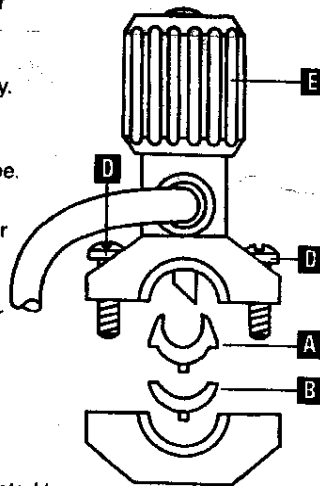

*Note: The SV-14TA can also be connected to 10mm O.D. and 15mm O.D. water lines.

